 


Introduction

Package Contents



OmniView
17" LCD
Rack Console



Rack-Mount
Brackets with
Screws



IEC Power Cable



VGA and PS/2
Cable Kit




Two Keys



Quick
Installation
Guide

This booklet will guide you through the basic steps needed to install the OmniView 17" LCD Rack Console.


Display Diagram

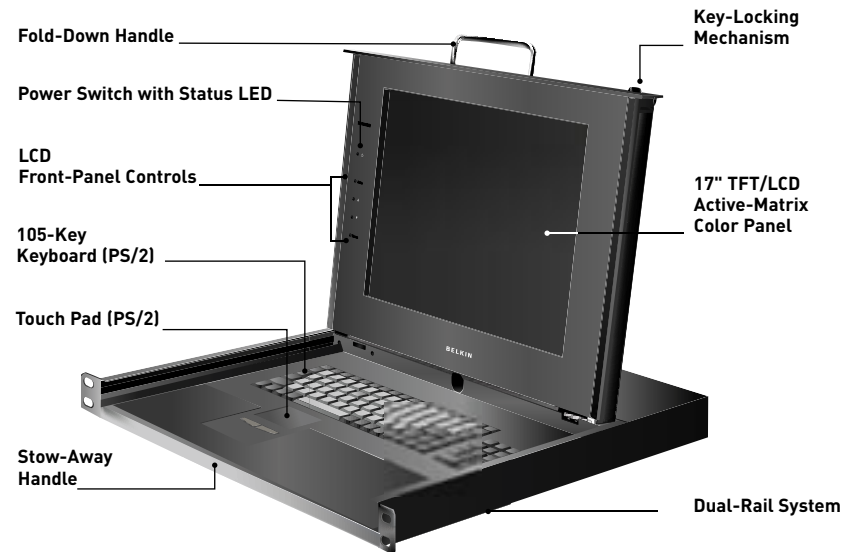

1. Specifications

Part No.:	F1DC100R
Enclosure:	Heavy-duty steel
Power:	100–240VAC @ 50–60Hz, auto-switching
Dimensions:	19 (W) x 1.75 (H) x 17.5 (L) in. (483 x 44.5 x 445mm)
Weight:	25.1 lbs. (11.4kg.)
Display Type:	17" TFT/LCD active-matrix, color
Resolution:	Up to 1280x1024@65Hz
Video Type:	VGA
Contrast Ratio:	350:1
Brightness:	250 cd/m2 typical
Pixel Pitch:	0.264 (H) x 0.264mm (W)
Panel Color:	16.2 million display colors
Viewing Angle:	115° (Horiz.)/90° (Vert.)
Keyboard Type:	Laptop-style, integrated, high-quality, 105-key keyboard with touch pad
Operating Life of Individual Keys:	8 million cycles
CPU Port Type:	HDDB15 (VGA), miniDIN6 (PS/2)
CPU Platforms:	VGA, PS/2
Keyboard Output:	miniDIN6 (PS/2)

2. Installation

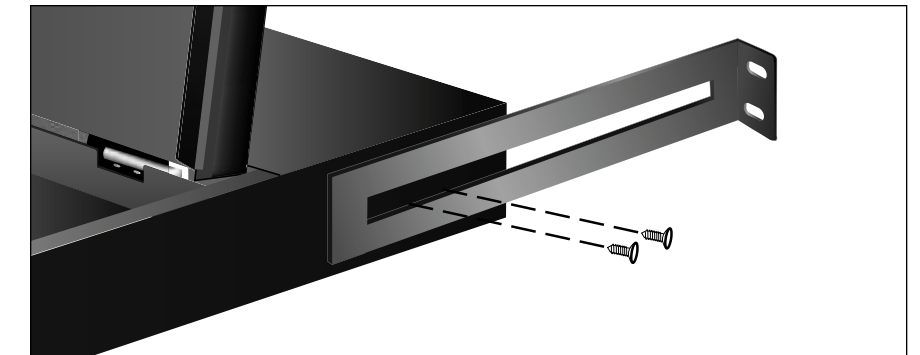

- STEP 1:** Remove the contents from the box.
- STEP 2:** Install the rack-mount brackets to the LCD Rack Console.
- STEP 3:** Mount the LCD Rack Console to your rack or cabinet.
- STEP 4:** Connect the IEC power cable to an active power outlet.
- STEP 5:** Connect your VGA and PS/2 cable kit to the LCD Rack Console.
- STEP 6:** Connect your VGA and PS/2 cable kit to your KVM switch or server.
- STEP 7:** Power up the LCD Rack Console.
- STEP 8:** Power up your KVM switch or server.

3. FAQ/Troubleshooting

My LCD Rack Console doesn't appear to be on.

Make sure that the power switch located at the front of the LCD drawer is in the "on" position and that the power cable is properly plugged in.

Do I have to install any software to use the LCD Rack Console?

No, the LCD Rack Console does not require any drivers or software to be installed in your servers. Simply connect the LCD Rack Console directly to a server or KVM switch and it is ready for use.

BELKIN

www.belkin.com

Belkin Tech Support

US: 800-223-5546 ext. 2263
310-898-1100 ext. 2263
Europe: 00 800 223 55 460
Australia: 1800 235 546
New Zealand: 0800 235 546

Belkin Corporation

501 West Walnut Street
Los Angeles, CA 90220, USA
310-898-1100
310-898-1111 fax

Belkin Ltd.

Express Business Park, Shipton Way
Rushden, NN10 6GL, United Kingdom
+44 (0) 1933 35 2000
+44 (0) 1933 31 2000 fax

Belkin Ltd.

7 Bowen Crescent, West Gosford
NSW 2250, Australia
+61 (0) 2 4372 8600
+61 (0) 2 4372 8603 fax

Belkin B.V.

Boeing Avenue 333
1119 PH Schiphol-Rijk, The Netherlands
+31 (0) 20 654 7300
+31 (0) 20 654 7349 fax

© 2006 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed.



Control your rack servers from a compact 1U rack console

Start Here →

